



CSI JEWETT BRAND



2026 Interactive

Cadaver Handling Equipment Catalog

Spire Integrated Solutions manufactures the CSI Jewett brand of Cadaver Handling equipment.

Mobile storage carts



Mobile autopsy tables



Manual & Hydraulic cadaver lifters



Fixed & Removable tray transport carts



Fixed & Configurable storage rack systems



INTERACTIVE CATALOG



CSI JEWETT
SPIRE INTEGRATED SOLUTIONS

Click on a product link to jump to its page.



Mobile Storage Carts

Mobile Autopsy Tables

Transport Carts

Manual & Hydraulic Lift Concealed Transport Carts

Keyed-End Hydraulic Lift Transport Carts

Fixed Tray Transport Carts

Removable Tray Transport Carts

Transport Cart Rolling Frames



Cadaver Lifters

Manual Cadaver Lifters

Hydraulic Cadaver Lifter



Storage Rack Systems

Configurable Rack System

Fixed Rack System



OUR DELIVERY PROMISE

The manufacturing and delivery of your cadaver handling equipment will be made on schedule and ready for use.

Spire Integrated Solutions manufactures the CSI Jewett brand of morgue refrigeration equipment - made in America.



Question?



WEBSITE link
[Morgue Refrigeration](#)



Spire-is.com | healthcareteam@spire-is.com | 877 679 7800 © Spire Integrated Solutions . All rights reserved.
Spire Integrated Solutions manufactures the CSI Jewett brand of equipment.



Customized configurations available including wider or narrower and 3-4 tier capacities.

- Provides convenient transport and storage of single or multiple bodies to and from roll-in/walk-in refrigerators
- Trays are held securely in place but are easily removable when used in conjunction with the various CSI Jewett brand body lifters
- Heavy duty, 8"all-swivel casters with locks and wheel brakes



MC2 | Standard Size

- 2 tier transport cart
- 300lbs. capacity/per tray



[WEBSITE link](#)
Mobile Storage Carts

Model MC2B | Bariatric Size

- For bariatric applications - support for larger bodies
- 2 tier transport cart
- 400lbs. capacity / per tray

Unit Dimensions W x L x H	Tiers	Capacity per tray	Tray Type	Unit Dimensions W x L x D
30.25" x 79.5" x 34.75"	2	400	MT2	30.25" x 79.5" x 2.75"

[Question?](#)

1867 Series | Hydraulic Mobile Autopsy Tables


700lbs. capacity | full tilt | height adjustment

- Multiple cart dimensions
- Foot-operated, hydraulic controls
- Removable concealment cover for discreet transport
- Table locks and drains into CSI Jewett brand, wall-mounted, dissecting sinks
- Adjustable heights from 29.5" to 37.5"



WEBSITE link
SR1910 Series

Wall-Mounted Dissecting Sink

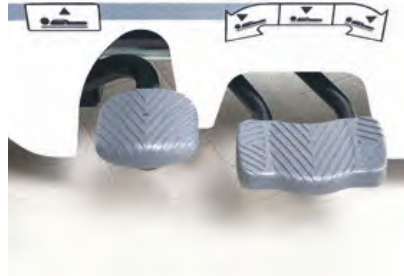

Hydraulic height and tilt adjustment



Brake and steering



Choose from wheels or casters

DIMENSIONS

Model	Size	Adj. Height ¹	Rollers	Saddle Tray	Fixed Top	Side Loading	End Loading	Parks Against Sink
SR1867-03	30.3" x 79.5"*	29.5" to 37.5"			✓			
SR1867-08	34.1" x 84"	29.5" to 37.5"	✓				✓	
SR1867-09-MT1	28.3" x 84"	22.1" to 34.3"		✓				✓
SR1867-09-MT2	34.1" x 84"	22.1" to 34.3"		✓				✓
SR1867-10	30" x 78"*	22" to 34"			✓			
SR1867-70	34.1" x 84"	27.8" to 37.5"	✓				✓	
SR1867-72	28.3" x 84"	27.3" to 37.1"	✓			✓		
SR1867-74	34.1" x 84"	23.5" to 36"	✓			✓	✓	

With frame range measured from bottom of tray | * Models do not include cover

Question?

MODEL DESCRIPTIONS

SR1867-03

Fixed, deep body tray

SR1867-08

With roller frame tray support

SR1867-09

With saddle type tray support

SR1867-10

With fixed table top with a marine edge

SR1867-70

Full-width roller frame tray support to accommodate multiple tray widths

SR1867-72

With side loading roller

SR1867-74

Omni-directional roller frame tray support allowing both end and side loading

700lbs. capacity | full tilt | height adjustment



Tray with rack for concealment cover.



Optional concealment cover

3 Tray Size Choices

3 tray sizes that work with CSI Jewett brand hydraulic concealed transport carts and mobile autopsy tables.

MT1 24.25" x 79.5"

MT2 30.25" x 79.5"

MT4 36.25" x 79.5"



WEBSITE link
[Refrigeration Equipment](#)



WEBSITE link
[Mobile Autopsy Tables](#)



Question?

[Back to top](#)

Manual & Hydraulic Lift Concealed Transport Carts

These lightweight, easily maneuverable carts feature adjustable height for bedside transfer, a concealed tray, and a cover to maintain discretion during transport.

The cart's oversized casters and aluminum construction minimize strain on the staff.



FEATURES

- Sizes range 30" x 84"- 40.1" x 84"
- Lightweight
- 5" to 8" swivel casters available
- Manual, battery powered, and hydraulic crank types available
- Various tray types (included)
- Minimal effort to the bedside
- Hand crank various height adjustment
- Bariatric-size morgue equipment concealed transport carts available
- Design and crafted in the U.S.A
- 3 tray size choices

Concealment cover
(Optional)

DIMENSIONS

Model	Sizes	Adj. Height*	Included Tray Type	Capacity	Crank Type	Caster Size	Rollers	Saddle Tray	Fixed Top
CCT101	30" x 84"	18.5" to 31.8"	MT1	300 lbs.	Manual	6		Y	
CCT102R-MT2	34.1" x 84"	29.6" to 35.6"	MT2	1000 lbs.	Manual	8	Y		
CCT102-MT1	28.3" x 84"	29.6" to 35.6"	MT1	800 lbs.	Manual	8	Y		
CCT200	28.3" X 87"	13.5" to 38"	MT1	500 lbs.	Battery powered	5	Opt	Opt	Opt
CCT3687	28.3" x 84"	27.4" to 33.4"	MT1	1000 lbs.	Hydraulic lift	8		Y	
CCT3687B	34.1" x 84"	27.4" to 33.4"	MT2	1000 lbs.	Hydraulic lift	8		Y	
CCT4087	40.1" x 84"	27.5" to 33.5"	MT4	1000 lbs.	Hydraulic lift	8		Y	

*With frame range measured from bottom of tray

[Question?](#)

MODEL DESCRIPTIONS

CCT101

- **300lbs. capacity**
- **Manual crank**
- MT1 type tray included (Saddle tray)
- 6" inch casters
- Adjustment provided by a rear mounted lift mechanism
- Tray elevation height from 22" to 35"



CCT3687

- **1000lbs. capacity**
- **Hydraulic lift**
- Heavy-duty version of the CCT101
- MT1 type tray included (Saddle tray)
- 8" casters
- Tray elevation height from 26" to 36"

CCT3687B

Bariatric

- **1000lbs. capacity**
- **Hydraulic lift**
- Rollers (standard)
- 8" casters
- Includes the MT2 body tray (Saddle tray)
- Tray elevation height from 27.4" to 33.4"

CCT4087

- **1000lbs. capacity**
- **Hydraulic lift**
- Saddle tray (standard)
- 8" casters
- Includes the MT4 body tray
- Tray height from 27.5" to 33.5"

CCT1032R-MT2

- **800lbs. capacity**
- **Manual crank**
- MT2 type tray included
- Optional rollers
- 8" casters
- Tray elevation height from 29.6" to 35.6"



[WEBSITE link](#)
Concealed Transport Carts

CCT102R-MT2

- **1000lbs. capacity**
- **Manual crank**
- MT1 type tray included
- Rollers included
- 8" casters
- Tray elevation height from 29.6" to 35.6"

CCT200

Bariatric

- **500lbs. capacity**
- **Battery-powered**
- Heavy-duty version of the CCT101 (see above)
- 5" casters
- Includes an MT1 tray
- Foot pedal, battery-powered actuator lifting mechanism
- Accommodates MT2 wider body trays (optional)
- Available in multiple configurations
- Tray elevation height from 13.5" to 38"

Question?

1000lbs. capacity

AR511 SERIES | Height Adjustable Hydraulic Lift Transport Cart

FEATURES

- Hydraulic lift
- Latches onto the CSI Jewett brand SR1910 wall-mounted sink
- Stainless steel
- Sloped, 14-gauge stainless steel table top
- Hydraulic cylinder actuators
- Hand crank allows 6" elevated cart end for drainage
- Cart base constructed of heavy duty, fully-welded stainless steel

Keyed-end mates to the CSI Jewett brand SR1910 sink.



Removable, sliding under shelf (Optional)



Hydraulic elevating tilt mechanism (Optional)



[WEBSITE link](#)
Hydraulic Lift Transport Carts



The AR511 Series Transport Cart attached to the CSI Jewett Brand SR1910 Series Wall-Mounted Dissecting Sink.



Removable concealment cover (Optional)



[WEBSITE link](#)
SR1910 Series
Wall-Mounted Dissecting Sink

Question?

Fixed Tray Transport Carts

800lbs. capacity

These transport carts makes it smooth and easy to transfer cadavers.

SR2446

26" W x 35.5" H x 78" L

SR3080

30" W x 35.5" H x 80" L

SR4832

42" W x 35.5" H x 80" L



Keyed-end of table mates with the CSI Jewett brand and other wall-mounted autopsy sinks.

FEATURES

- Table tops are manufactured of 14-gauge type 304 stainless steel
- Full perimeter 0.75 inch marine edge for fluid containment and 1" slope to facilitate drainage
- Fully-welded, polished table tops
- No crevices, lapped edges, rivets, bolts or other fastening devices
- Work surfaces remain smooth while preventing the accumulation of bacteria
- Low-profile surface allows for easy body access and transfers
- Heavy-gauge, polished stainless steel legs and welded cross rails for support of heavy bodies
- Leg spacing allows for docking with CSI Jewett brand cart latches on wall-mounted sinks



Drain with plug (Optional)



Drain with valve (Optional)



Removable concealment cover (Optional)



Accessory mount (Optional)



Book holder (Optional)



[WEBSITE link](#)

Fixed Tray Transport Carts

Question?

Removable Tray Transport Carts

Table locks enable direct drainage into CSI Jewett brand, wall-mounted, dissecting sinks.

- **Continuous autopsy process:** Bodies remain on the tray throughout the examination, ensuring efficiency and reducing handling
- **Secure storage:** Integrated multi-body cantilevered rack system for safe and organized body storage
- **Hygienic design:** Seamless construction without crevices, eliminating bacteria buildup and maintaining a clean work environment



SR2079-06 | Stainless Steel

- 16-gauge polished type 304 stainless steel with one-piece welded construction

SR2079-07 | Fiberglass

- Molded fiberglass reinforced with a gel coat finish
- Allows for x-ray applications and additionally features an exclusive sump drain for rapid drainage



Removable concealment cover (Optional)



SR2079-06 | Stainless Steel with and without tray



WEBSITE link

Removable Tray Transport Carts & Rolling Frame

Transport Cart Rolling Frame | SR1484

The SR1484 Transport Cart's roller frame is compatible with other CSI Jewett brand roller equipment



WEBSITE link
CUSTOMIZABLE
refrigeration equipment



Question?

[Back to top](#)

SR1842 Manual Cadaver Lifter Series

Safely and efficiently transports up to 1000lbs.

- Heavy-duty winch with high gear ratio
- Highly maneuverable
- Support straps secure the deceased
- Built-in automatic safety brake
- Various lifting devices can be attached
- Compatibility with a wide range of morgue storage systems



MODEL DESCRIPTIONS

SR1842

With Lift Beam and Body Straps

SR1842-01

With Chain Lift Assembly

SR1842-02

With Roller Pallet Assembly

SR1842-37

With Side Loading Pallet Assembly

Accessories

SR1211-4

Roller Pallet

SR1842-01

With lift beam and body straps

SR1842-37

With side loading pallet assembly

SR1648

Lift Beam

DR427

Chain Lift Assembly

DR460

Scale Assembly for lift beam

**ACCESSORY
DR427
Chain Lift Assembly**



 [WEBSITE link](#)
Manual Cadaver Lifter

**ACCESSORY
SR1211-4 Roller Pallet**



**ACCESSORY
SR1648 Lift Beam**

[Question?](#)

[Back to top](#)

Hydraulic Cadaver Lifters

SR1468W | Power Cadaver Lifter

1000lb. capacity

- 2 model heights available
- Compatible with CSI Jewett brand body handling attachments and racks
- Configurable to work with various lifting mechanisms and storage options
- Removable optional attachments
- On-board charger for easy recharging
- 5" phenolic wheels
- Battery indicator and master power switch



SR2154 | Hydraulic Scissor Lift

600lb. capacity

- Built-in hydraulic lift system
- Lifting range 12.5" to 71.5"
- Torsion-free steel construction
- Large foot pedal controls (optional hand set)
- 1.56" diameter rollers with hand brake
- Built-in battery charger
- Blue powder coated finish
- The SR2154 works with the MT1 body tray



SR821 | Hydraulic Lift System

600lb. capacity

- Lifting range 12.5" to 71.5"
- Torsion-free steel construction
- Large foot pedal controls (optional hand set)
- 1.56 diameter rollers with hand brake
- Built-in battery charger
- Blue powder coated finish

The SR2154 works with the CSI Jewett brand, MT1 body tray

Question?

Configurable Mobile Storage Rack Systems

Large capacity, configurable storage racks compatible with CSI Jewett brand MT Series Body Trays, plus other manufacturer's trays.

Available with 2,3 or 4 tiers and include either MT1 or MT2 tray.

2000lbs. capacity total

- Constructed of type 304 stainless steel
- All seams are fully welded and polished
- Roller frame is a formed, single piece construction, has full length, anti-tilt retainer channels, and Killian zinc-plated roller bearings
- Configurable storage racks compatible with MT Series Body Trays and other manufacturer's trays
- 6" diameter swivel type casters with polyurethane tires



Automatic pivoting tray lock system secures the tray in place

(2) tier racks

SR1211-25

Includes (2) MT1 body trays
28" x 42.88" x 84.25"

SR1211-2-21

Includes (2) MT2 body trays
34" x 42.88" x 84.25"



(3) tier racks

SR1211-2-20

Includes (3) MT1 body trays
28" x 58.88" x 84.25"

SR1211-2-26

Includes (3) MT2 body trays
34" x 58.88" x 84.25"

(4) tier racks

SR1211-2-22

Includes (4) MT2 body trays
34" x 75" x 84.25"

SR1211-2

Includes (4) MT2 body trays
28" x 75 x 84"



[WEBSITE link](#)

Configurable Storage Rack Systems

Question?

Fixed Storage Rack Systems

Large capacity, fixed storage, with a modular construction.



 [WEBSITE link](#)
Fixed Storage Rack Systems

 [WEBSITE link](#)
Refrigeration equipment



SR1211-3 | Storage Rack System

- Ideal for coroner's offices and university anatomy systems
- Design allows the cadaver to remain on the body tray from receiving through final disposition
- Ergonomic for staff
- Reduces the risk of cadaver misidentification
- No welding required
- Additionally, units can be easily relocated, reconfigured or added to if needed
- The rack system can be used with the CSI Jewett brand, MT Series body trays
- For use with other manufacturers trays



SR1556 | Cantilever Fixed Storage Rack

- Cantilever storage rack with four tiers
- Large, screw type leveling feet
- For use with MT1 and MT2 body trays
- Options for the SR1556 include fixed arms, mobile units, different tier configurations and support for wider body trays
- Fixed arms
- Mobile units
- Different tier configurations available
- Support for wider body trays

Question?

[Back to top](#)