

Spire Integrated Solutions manufactures the CSI Jewett brand of compact dissecting sinks.

Customization available

# Compact Dissecting Sink

Model SR1423

**One-piece, autopsy sink to accompany a mobile autopsy table or used as a utility/multi-purpose sink.**



## Dimensions | Inches

<b>Sink</b>	34 W x 22 D
<b>Unit</b>	43.4 H x 34 W

### Features

- Wrist-operated, chrome-plated brass faucet
  - Swivel gooseneck spout
- Waste assembly includes:
  - Removable strainer
  - Rear-connected overflow
  - Quick-opening, lever handle waste valve
- A reverse-flow hydro-aspirator with built-in vacuum breaker.
  - Hot and cold water flow control
  - 10' of PVC hose
  - Hose storage rack
  - Anti-aerosol waste outlet
- Duplex waterproof electrical outlet with ground fault circuit interrupter.
- Factory-installed plumbing

### Construction

- One piece design
- Constructed of 14-gauge, Type 304 stainless steel.
- Welded & polished stainless steel


### Options

- Positive cart-latching device securing a mobile table to the sink.
- Heavy-duty, welded stainless steel leg and cross rail assembly (instead of wall-mount configuration).
- Concealed base
- Bracket for hanging an organ scale
- Hanging dial organ scale
- Hanging digital organ scale
- Waste disposer with automatic water control - 1 HP motor is available (others on request).
- Emergency eye wash

**Utilities**

<b>Electrical (E)</b>	15 AMP 125V AC or DC, Weatherproof, GFCI Duplex
<b>Plumbing (P)</b>	Hydro-aspirator: Water-powered vacuum generator Sink faucet: Hot and cold mixing faucet.
<b>Water (W)</b>	Water service control, mixing faucet, 60" of aspirator hose; factory installed and hooked up.
<b>Waste Assembly (WA)</b>	1.5" IPS twist handle, Waste rear connected overflow, Chrome-plated brass; factory installed & hooked up.

**Drawings**

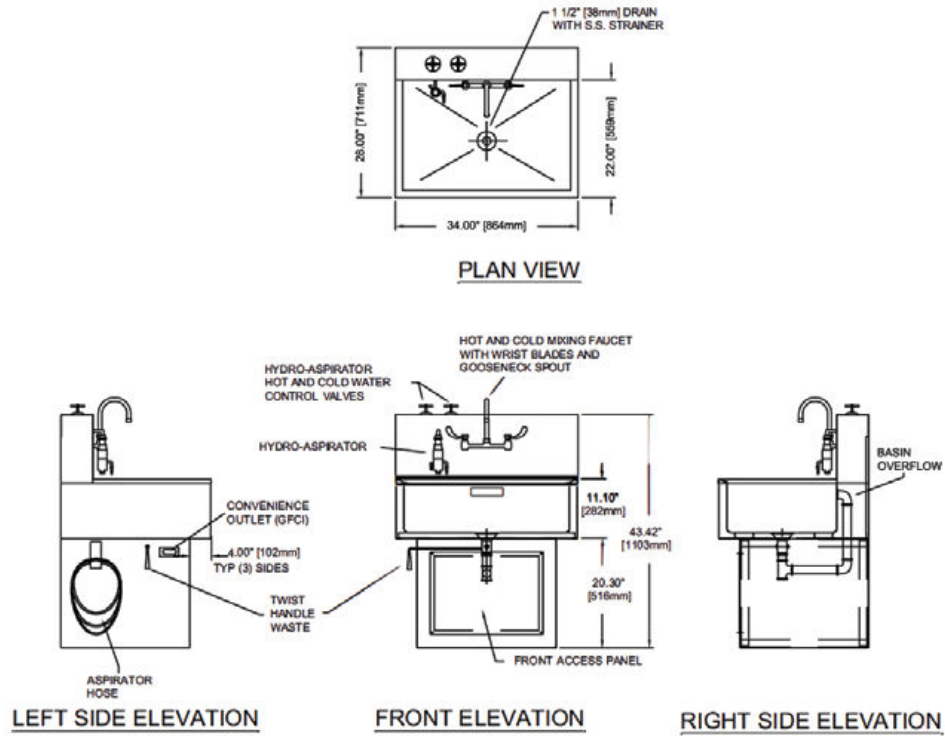

Use our website search tool and type **Morgue and Autopsy Equipment** at [spire-is.com](http://spire-is.com)



**Autopsy Tables**



**Cadaver Handling**



**Storage Racks**



**Refrigeration**